

GenDon 3 Character modification installation for the TRS80 Model I


1. Three track cuts are required (two on the component side and one on the solder side of the motherboard)
2. Locate Z10 and cut the track on top of the PCB between Z10/14 and Z11/3

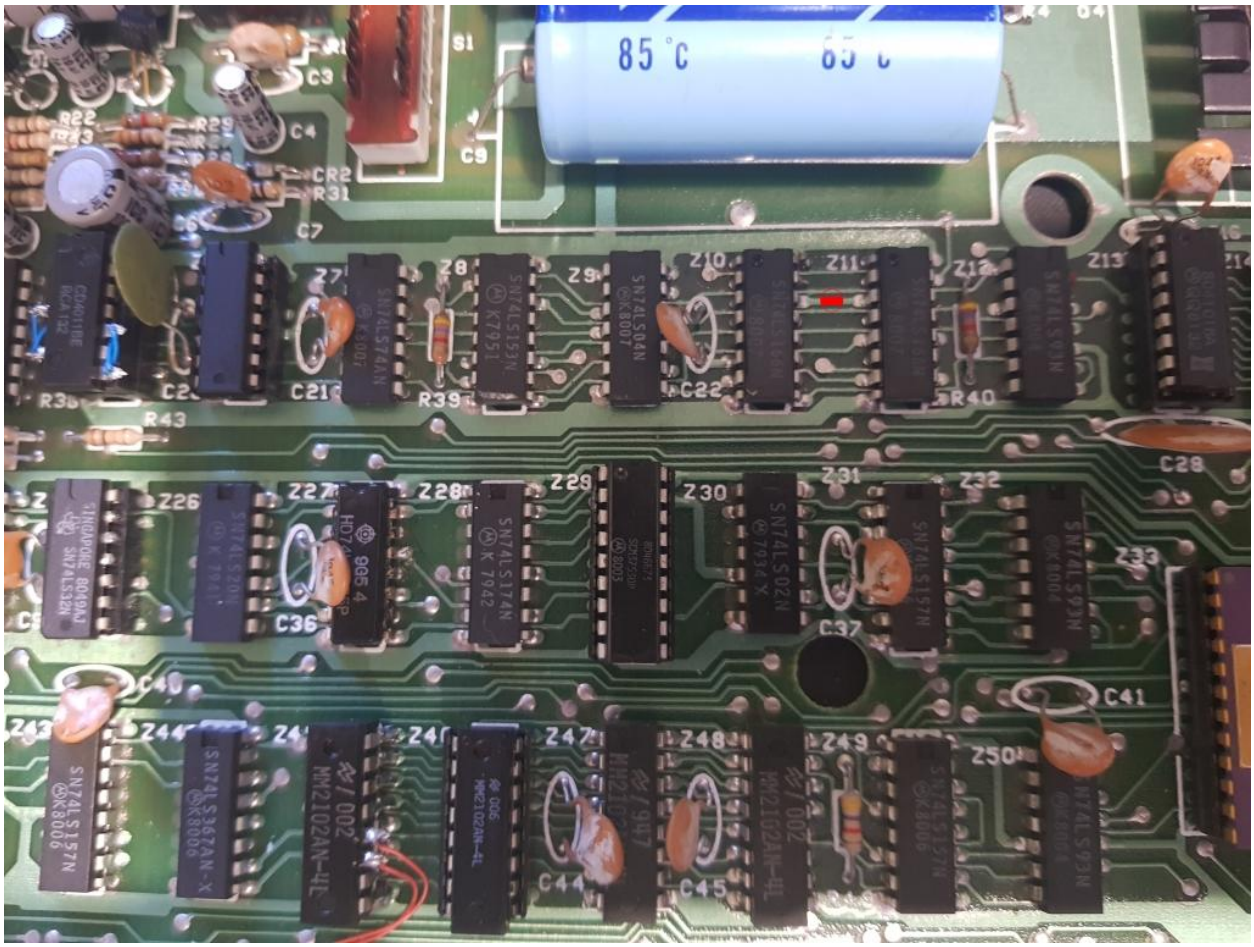


3. Fit jumper wire from Z10/1 to Z11/1 and cut trace going to Z10/14

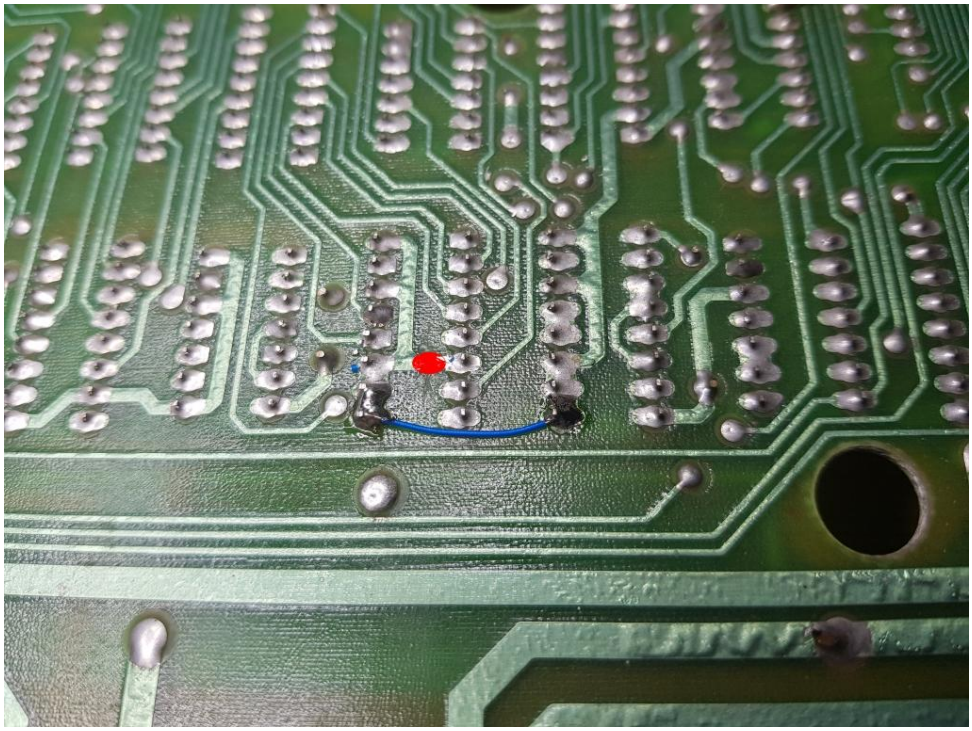


4. Locate Z27 cut trace Z27 - Z26/12 this is just below the Z27 label

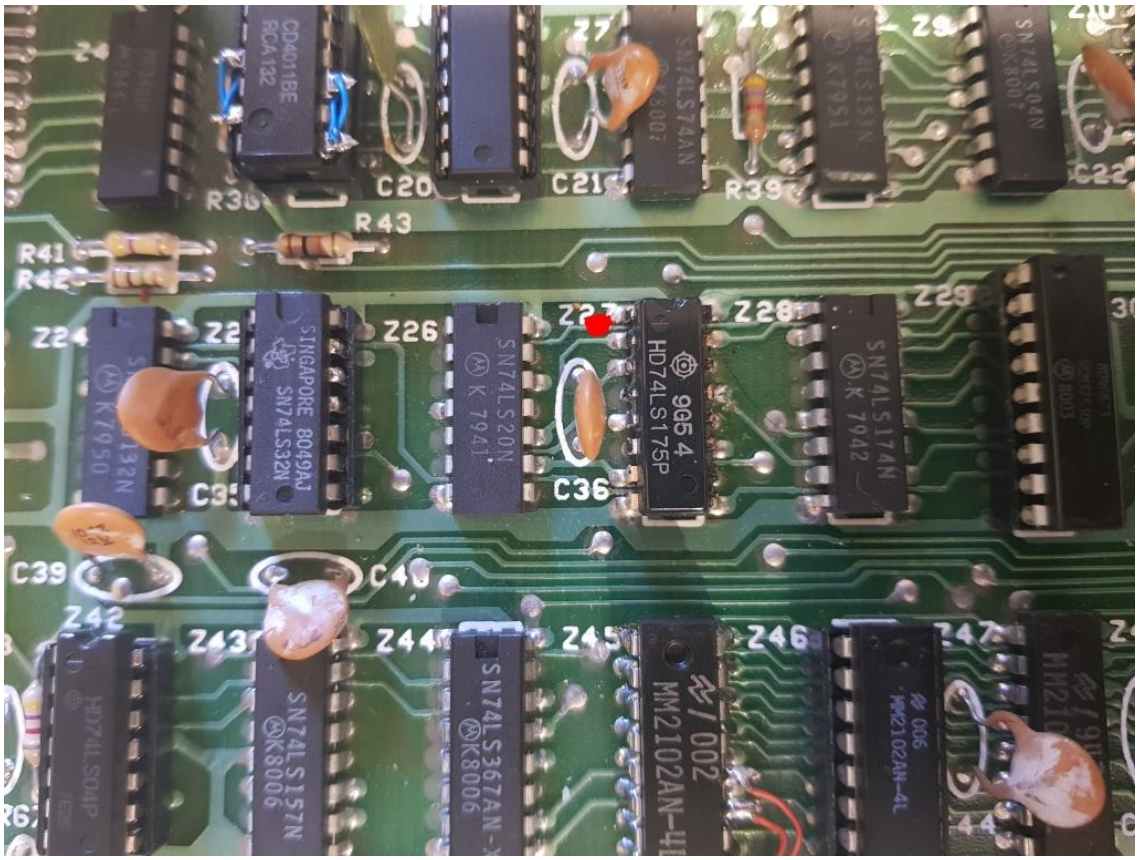


5. Solder Z26 pins 12 and 13 together on the bottom of the PCB

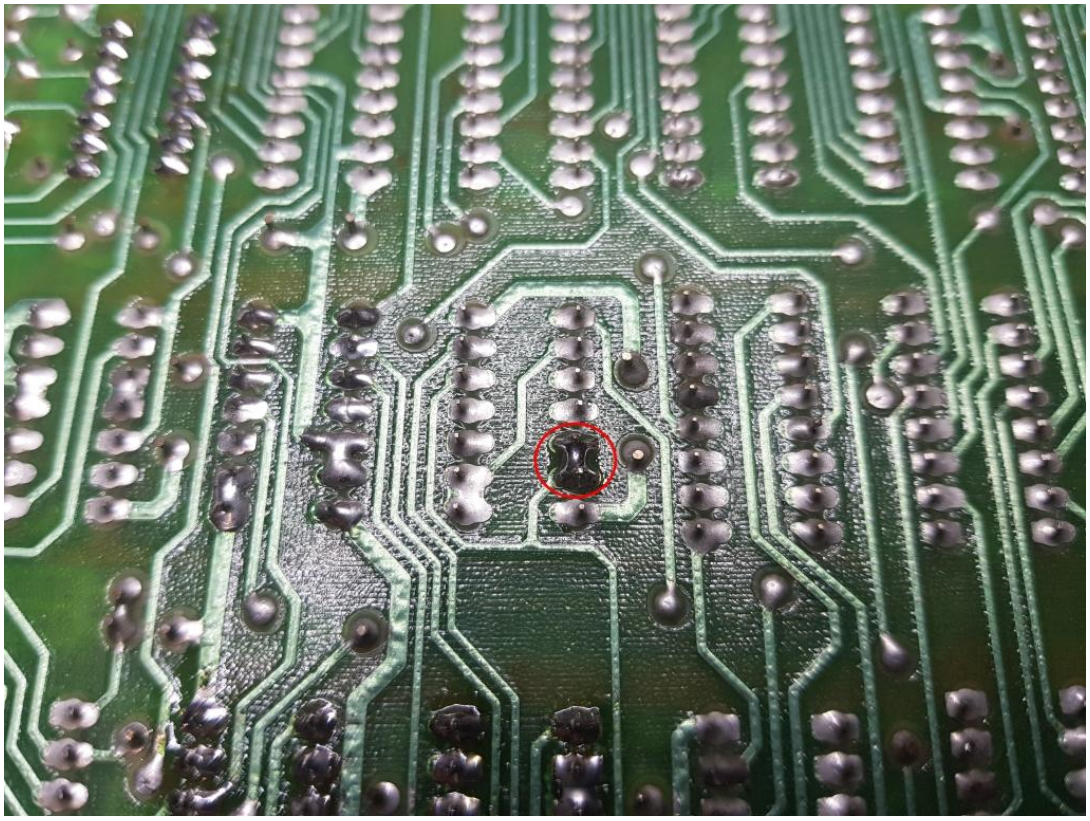


6. Add wires from Z10/14 and Z12/11 to GenDon 3 PCB matching the correct locations. Locate and remove Z29

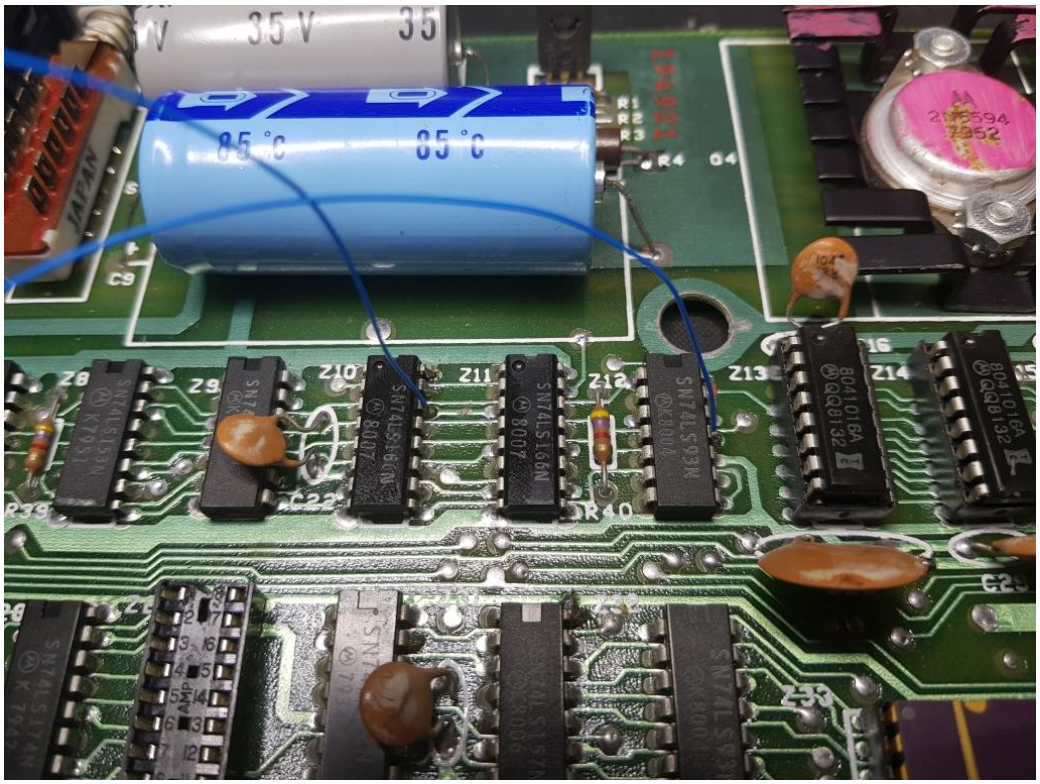


Completed installation with PCB plugged into Z29 socket

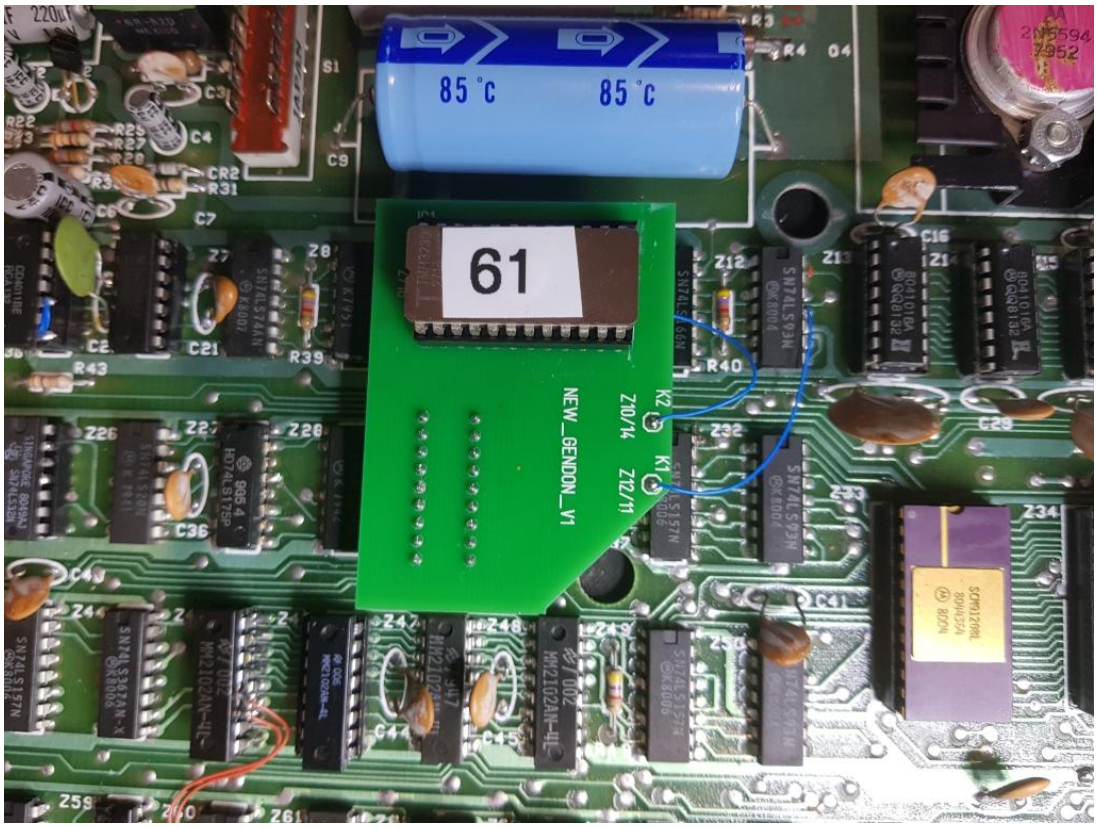

The character set before

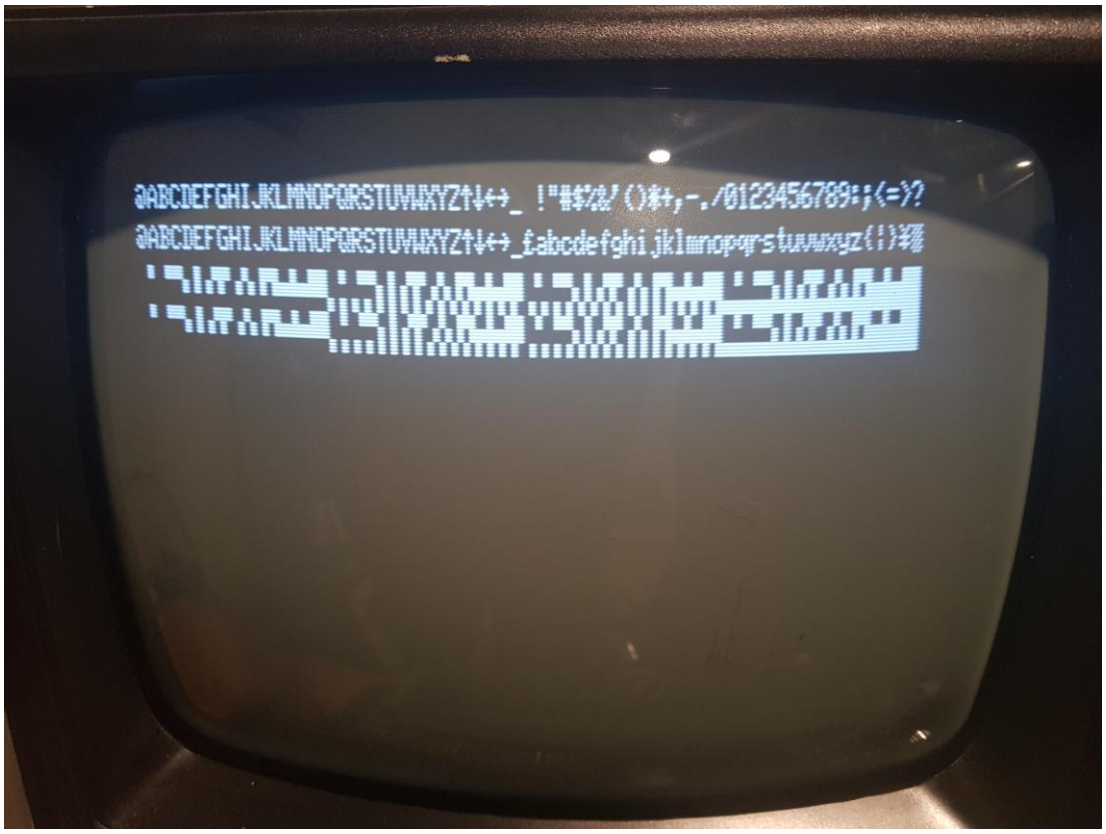

The character set after

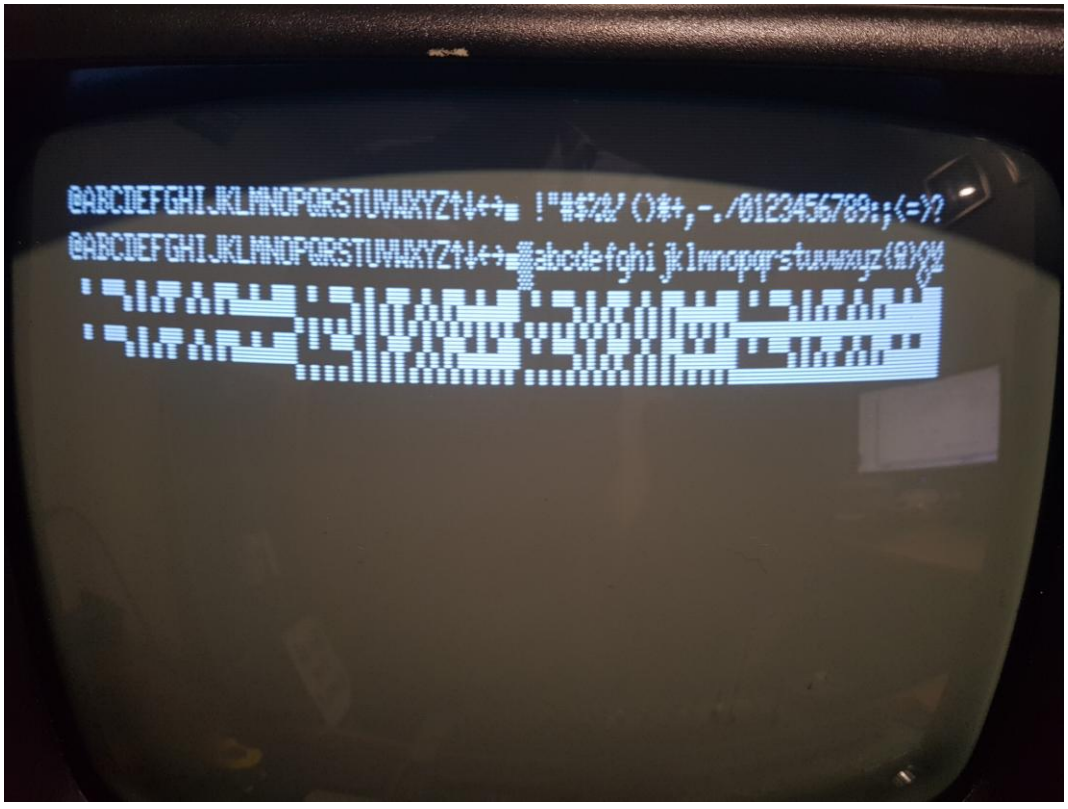

Regards, John Gerrard